



# “Ethernet” communicator E16

## Installation manual

July, 2019

## Contents

<b>SAFETY REQUIREMENTS.....</b>	<b>3</b>
<b>1 DESCRIPTION .....</b>	<b>4</b>
1.1 List of compatible control panels .....	5
1.2 Specifications .....	5
1.3 Communicator elements.....	6
1.4 Purpose of terminals.....	6
1.5 LED indication of operation.....	6
1.6 Structural schematic with E16 usage.....	7
<b>2 QUICK CONFIGURATION WITH TRIKDISCONFIG SOFTWARE .....</b>	<b>7</b>
2.1 Settings for connection with Protegus app .....	8
2.2 Settings for connection with Central Monitoring Station.....	9
<b>3 INSTALLATION AND WIRING .....</b>	<b>10</b>
3.1 Schematics for wiring the communicator to a security control panel.....	10
3.2 Schematic for connecting to panel keyswitch zone.....	11
3.3 Schematics for input connection .....	12
3.4 Connect LAN cable .....	13
3.5 Schematics for wiring a relay.....	13
3.6 Schematics for connecting iO series expansion modules .....	13
3.7 Turn on the communicator .....	13
<b>4 PROGRAMMING THE CONTROL PANEL.....</b>	<b>14</b>
<b>5 REMOTE CONTROL .....</b>	<b>16</b>
5.1 Adding the security system to Protegus app.....	16
5.2 Additional settings to arm/disarm the system using the control panel's keyswitch zone.....	16
5.3 Arming/disarming the alarm system with Protegus .....	18
<b>6 TRIKDISCONFIG WINDOW DESCRIPTION.....</b>	<b>19</b>
6.1 TrikdisConfig status bar description.....	19
6.2 "System settings" window .....	20
6.3 "CMS reporting" window .....	21
6.4 "User reporting" window .....	23
6.5 "Ethernet settings" window.....	23
6.6 "IN/OUT" windows.....	24
6.7 "RS485 modules" window.....	24
6.8 "Event summary" window .....	26
6.9 Restoring factory settings.....	27
<b>7 REMOTE CONFIGURATION .....</b>	<b>27</b>
<b>8 TEST COMMUNICATOR PERFORMANCE .....</b>	<b>27</b>
<b>9 FIRMWARE UPDATE .....</b>	<b>28</b>

## Safety requirements

The communicator should be installed and maintained by qualified personnel.

Prior to installation, please read this manual carefully in order to avoid mistakes that can lead to malfunction or even damage to the equipment.

Disconnect the power supply before making any electrical connections.

Changes, modifications or repairs not authorized by the manufacturer shall void your rights under the warranty.



Please act according to your local rules and do not dispose of your unusable alarm system or its components with other household waste.

## 1 Description

“Ethernet” communicator **E16** directly connects to supported DSC, Paradox, UTC Interlogix (CADDX), Innerrange, Texecom, Honeywell, Crow and Pyronix alarm panels.

Communicator transmits full event information to the Central Monitoring Station.

Communicator also works with **Protegeus** application. With **Protegeus** users can control their alarm system remotely and get notifications about security system events. **Protegeus** app is compatible with all security alarm panels from various manufacturers that are supported by the **E16** communicator. Communicator can transmit event notifications to the Central Monitoring Station and work with **Protegeus** simultaneously.

For panels from other manufacturers use the **E16T** communicator.

## Features

### Sends events to monitoring station receiver:

- Sends events to TRIKDIS software or hardware receivers that work with any monitoring software.
- Can send event messages to SIA DC-09 receivers.
- Connection supervision by polling to IP receiver every 30 seconds (or by user defined period).
- Backup channel, that will be used if connection with the primary channel is lost.
- With parallel communication channels events can be sent to two receivers at same time.
- When Protegeus service is enabled, events are first delivered to CMS, and only then are sent to app users.

### Works with Protegeus app:

- “Push” and special sound notifications informing about events.
- Remote system Arm/Disarm.
- Remote control of connected devices (lights, gates, ventilation systems, heating, sprinklers, etc.).
- Remote temperature monitoring (with **iO** or **iO-WL** expanders).
- Different user rights for administrator and installer.

### Notifies users:

- Users can be notified about events with Protegeus app.

### Controllable outputs and inputs:

- 3 double I/O terminals that can be set either as input (IN) or controllable output (OUT) terminals.
- Outputs controlled by the **Protegeus** app.
- Add additional inputs and controllable outputs with wired and wireless **iO** expanders.

### Quick setup:

- Settings can be saved to file and quickly written to other communicators.
- Two access levels for configuring the device for CMS administrator and for installer.
- Remote configuration and firmware updates.



### 1.1 List of compatible control panels

Manufacturer	Model
DSC®	<u>PC585</u> , <u>PC1404</u> , <u>PC1565</u> , <u>PC1616</u> , <u>PC1832</u> , <u>PC1864</u> , <u>PC5020</u>
PARADOX®	<u>SPECTRA SP4000</u> , <u>SP5500</u> , <u>SP6000</u> , <u>SP7000</u> , <u>SP65</u>
	<u>MAGELLAN MG5000</u> , <u>MG5050</u> , <u>MG5050E</u>
	<u>DIGIPLEX EVO48</u> , <u>EVO192</u> , <u>EVOHD</u> , <u>NE96</u> , <u>EVO96</u>
	SPECTRA 1727, 1728, 1738
	ESPRIT E55, 728ULT, 738ULT
UTC Interlogix®	<u>NetworX (Caddx) NX-4v2</u> , <u>NX-6v2</u> , <u>NX-8v2</u> , <u>NX-8E</u>
Texecom®	<u>Premier 24</u> , <u>48</u> , <u>88</u> , <u>168</u>
	<u>Premier Elite 12</u> , <u>24</u> , <u>48</u> , <u>64</u> , <u>88</u> , <u>168</u>
Pyronix®	MATRIX 424, MATRIX 832, MATRIX 832+, MATRIX 6, MATRIX 816
Innerrange®	Inception
Honeywell®	<u>Ademco Vista-5</u> , <u>Ademco Vista-20</u> , <u>Ademco Vista-48</u>
Crow®	Runner 4/8, Runner 8/16


**Underlined** - Control panels directly controlled by *E16*.

\*Connect control panels from other manufacturers to the *E16T* communicator.

### 1.2 Specifications

Parameter	Description
Dual purpose terminals [IN/OUT]	3, can be set as either NC; NO; NC/EOL; NO/EOL; NC/DEOL; NO/DEOL (2,2 kΩ) type inputs or open collector (OC) type outputs with current up to 0,15 A, 30 VDC max. Expandable with <i>iO</i> series expanders.
Power supply voltage	10-18 V DC
Current consumption	100 mA (on standby) Up to 250 mA (while sending data)
Ethernet connection	IEEE802.3, 10 Base-T, RJ45 socket
Transmission protocols	TRK, DC-09_2007, DC-09_2012
Memory	Up to 60 messages
Changing settings	With TrikdisConfig computer program remotely or locally via USB Mini-B port
Operating environment	Temperature from -10 °C to 50 °C, relative humidity - up to 80% at +20 °C
Communicator dimensions	88 x 65 x 26 mm
Weight	80 g

### 1.3 Communicator elements

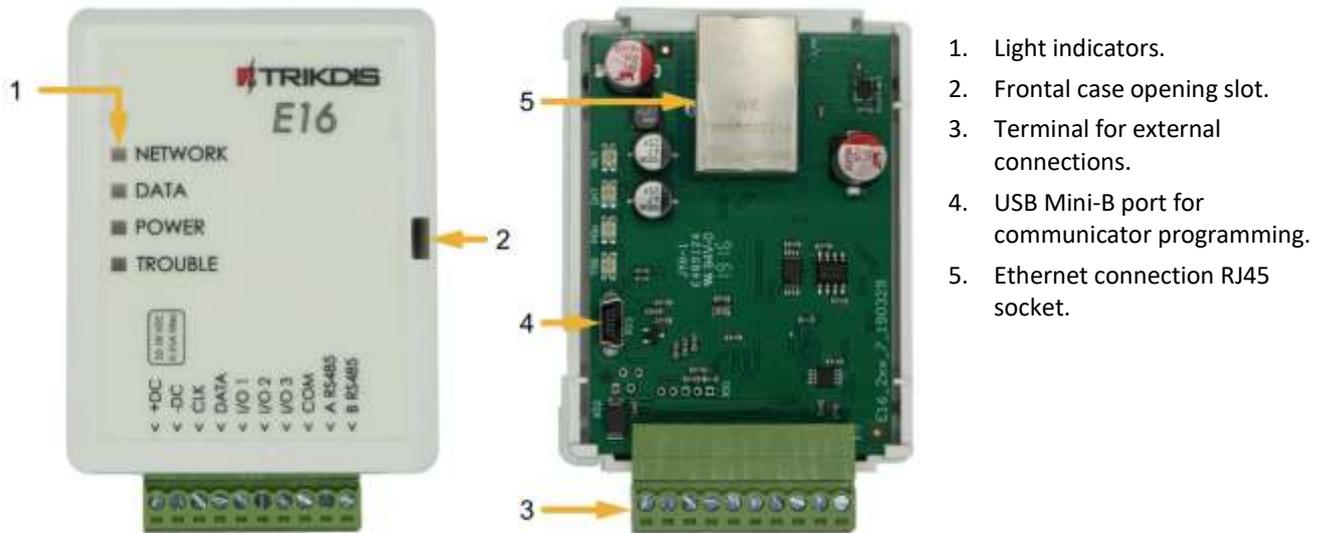

1. Light indicators.
2. Frontal case opening slot.
3. Terminal for external connections.
4. USB Mini-B port for communicator programming.
5. Ethernet connection RJ45 socket.

### 1.4 Purpose of terminals


Terminal	Description
+DC	+10 V/+18 V power supply
-DC	+10 V/+18 V power supply
CLK	Serial bus terminals for direct connection to control panel
DATA	
I/O 1	1 <sup>st</sup> input/output terminal
I/O 2	2 <sup>nd</sup> input/output terminal
I/O 3	3 <sup>rd</sup> input/output terminal
COM	Common (negative) terminal
A RS485	RS485 bus A contact
B RS485	RS485 bus B contact

### 1.5 LED indication of operation

Indicator	Light status	Description
NETWORK	Off	No connection to a computer network
	Green solid	Communicator is connected to a computer network
DATA	Off	No unsent events
	Green solid	Unsent events are stored in buffer
	Green blinking	<b>(Configuration mode)</b> Data is being transferred to/from communicator
POWER	Off	Power supply is off or disconnected
	Green solid	Power supply is on with sufficient voltage
	Yellow solid	Power supply voltage is insufficient ( $\leq 11.5V$ )
	Green solid and yellow blinking	<b>(Configuration mode)</b> Communicator is ready for configuration

Indicator	Light status	Description
	Yellow solid	<b>(Configuration mode)</b> No connection with computer
TROUBLE	OFF	No operation problems
	1 red blink	Connection error at the "physical" level (PHY Link status error)
	2 red blinks	DHCP error
	3 red blinks	DNS error
	6 red blinks	No connection with the receiver
	7 red blinks	Lost connection with control panel
	Red blinking	<b>(Configuration mode)</b> Memory fault
	Red solid	<b>(Configuration mode)</b> Firmware is corrupted

### 1.6 Structural schematic with E16 usage

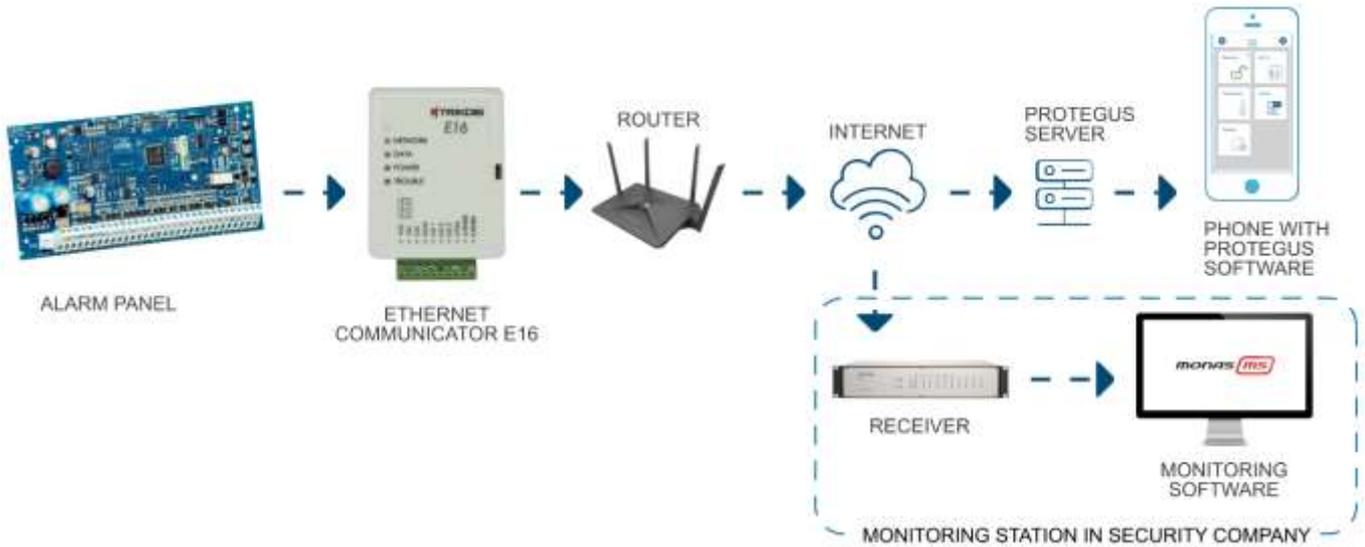

**Note:**

Before you begin, make sure that you have the necessary:

1. USB cable (Mini-B type) for configuration.
2. At least 4-wire cable for connecting communicator to control panel.
3. CRP2 cable for connecting to Paradox panel’s serial port.
4. Flat-head 2,5 mm screwdriver.
5. Particular security control panel’s installation manual.

Order the necessary components separately from your local distributor.

## 2 Quick configuration with *TrikdisConfig* software

1. Download **TrikdisConfig** configuration software from [www.trikdis.com](http://www.trikdis.com) (type “TrikdisConfig” in the search field) and install it.
2. Open the casing of the **E16** with a flat-head screwdriver as shown below:




3. Using a USB Mini-B cable connect the *E16* to the computer.
4. Run *TrikdConfig*. The software will automatically recognize the connected communicator and will open a window for configuration.
5. Click **Read [F4]** to read the communicator’s settings. If requested, enter the Administrator or Installer 6-digit code in the pop-up window.

Below we describe what settings need to be set for the communicator to begin sending events to the CMS (central monitoring station) and to allow the security system to be controlled with the *Protegeus* app.

### 2.1 Settings for connection with Protegeus app

In “System settings” window:

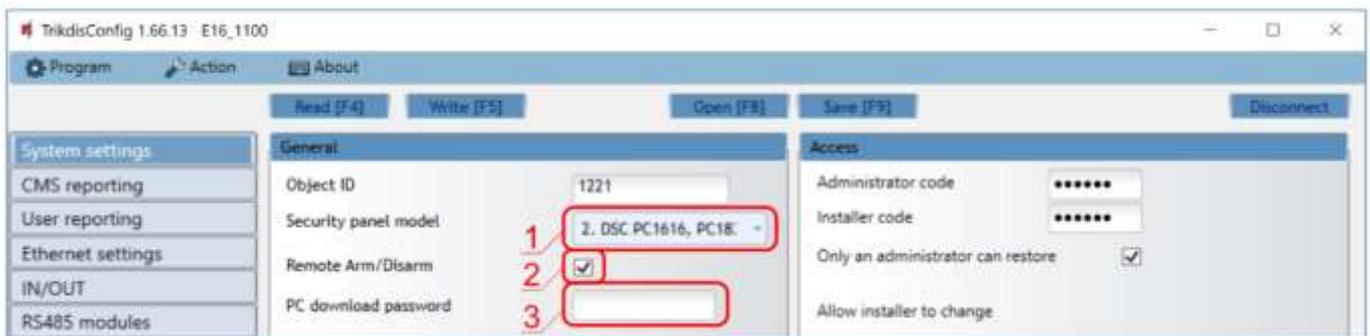

- 1) Select **Security panel model** that will be connected to the communicator.
- 2) Select **Remote Arm/Disarm** if you want users to be able to control the panel in *Protegeus* app with their keypad code. This setting is only shown for directly controlled panels.
- 3) For the direct control of Paradox and Texecom panels enter **PC download password**. It must match the password that is entered in the control panel.

**Note:** For the direct panel control to work, you will need to change the panel settings. How to do this is described in chapter 4 “**Programming the control panel**”. In this section you will find information on how to change the PC download/UDL password.

In “User reporting” window, “PROTEGUS Cloud” tab:



- 4) Tick the checkbox **Enable connection** to the *Protegeus* Cloud.


- 5) Change the **Protegeus Cloud access Code** for logging in to **Protegeus** if you want users to be asked to enter it when adding the system to **Protegeus** app (default password – 123456).

After finishing configuration, click the button **Write [F5]** and disconnect the USB cable.

**Note:** For more information about other **E16** settings in **TrikdisConfig**, see chapter 6 “**TrikdisConfig window description**”.


## 2.2 Settings for connection with Central Monitoring Station

In “System settings” window:

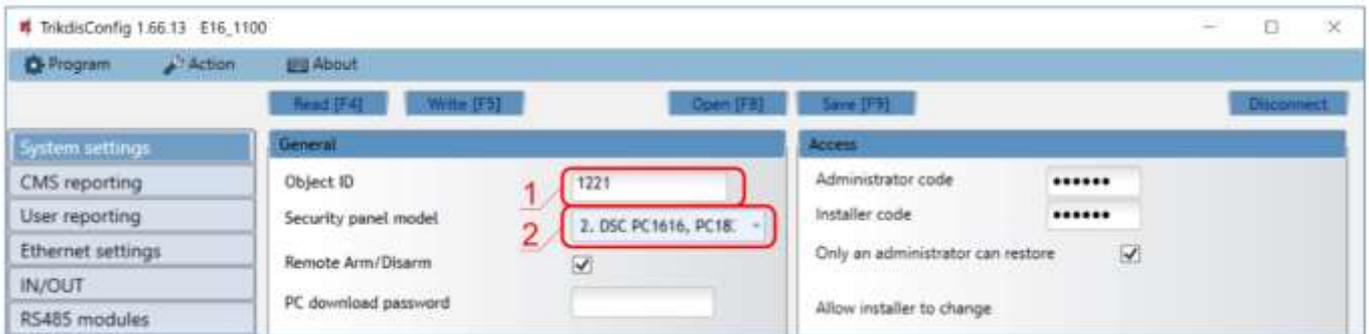

- 1) Enter **Object ID** (account) number provided by the Central Monitoring Station (4 characters, 0-9, A-F).
- 2) Select **Security panel model** that will be connected to the communicator.

In “CMS reporting” window settings for “Primary channel”:

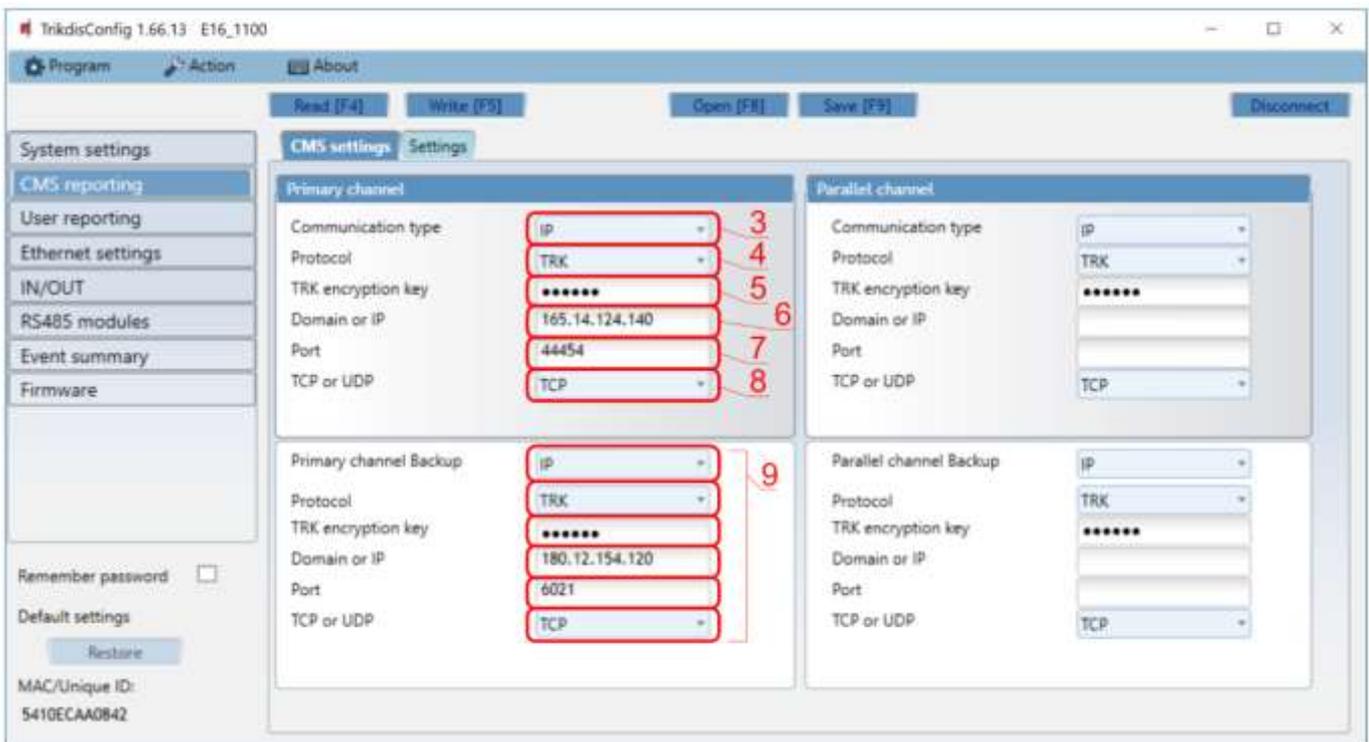

- 3) **Communication type** - select the **IP** connection method.
- 4) **Protocol** - select the protocol type for event messages: **TRK** (to TRIKDIS receivers), **DC-09\_2007** or **DC-09\_2012** (to universal receivers).
- 5) **TRK encryption key** - enter the encryption key that is set in the receiver.
- 6) **Domain or IP** - enter the receiver’s Domain or IP address.
- 7) **Port** - enter receiver’s network port number.
- 8) **TCP or UDP** - choose event transmission protocol (**TCP** or **UDP**) in which events should be sent.

**Note:** If you selected the **DC-09** protocol, additionally enter object, line and receiver numbers in the **Settings** tab of the **CMS reporting** window.

9) (Recommended) Configure **Primary channel Backup** settings.

10) (Recommended) Configure **Parallel Channel** and its **Parallel Channel Backup** settings.

After finishing configuration, click **Write [F5]** and disconnect the USB cable.


**Note:** For more information about other **E16** settings in *TrikdisConfig*, see chapter 6 “*TrikdisConfig* window description”.

### 3 Installation and wiring


#### 3.1 Schematics for wiring the communicator to a security control panel

Following one of the schematics provided below, connect communicator to the control panel.


**DSC panel connection diagram**

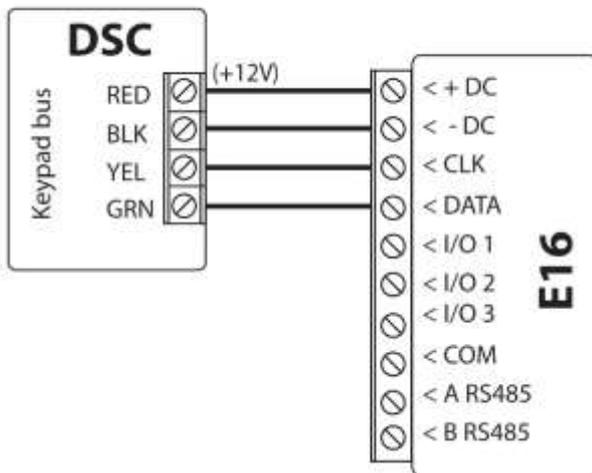


**PARADOX panel connection diagram**




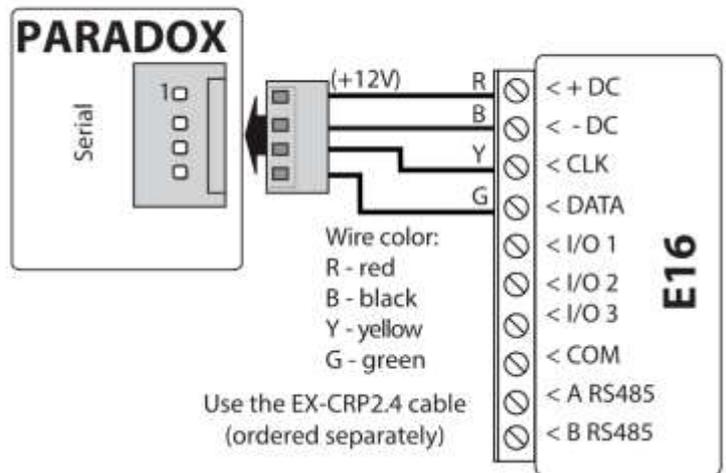


**CADDX panel connection diagram**

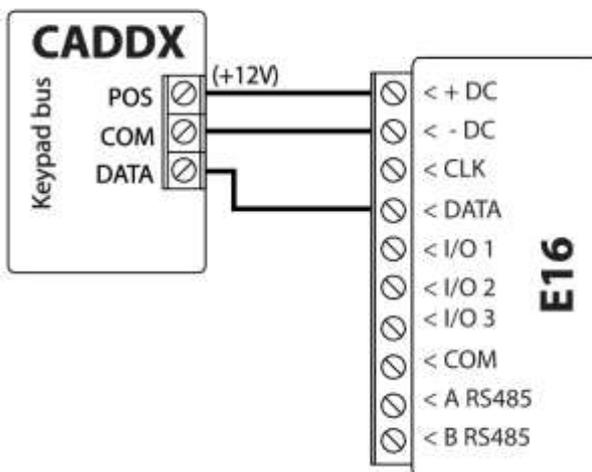

**TEXECOM panel connection diagram**

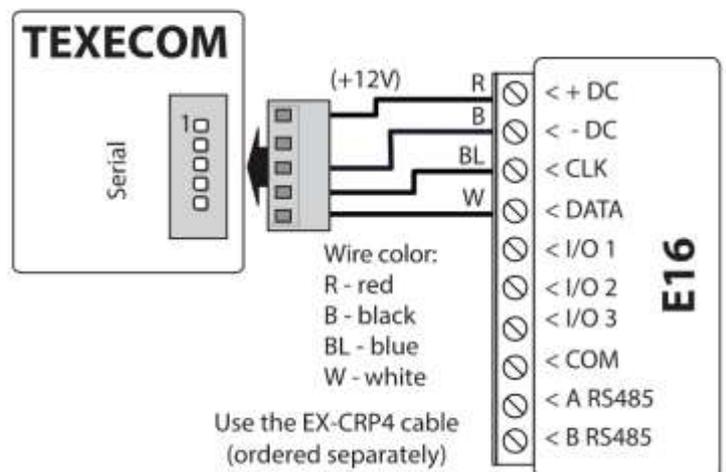


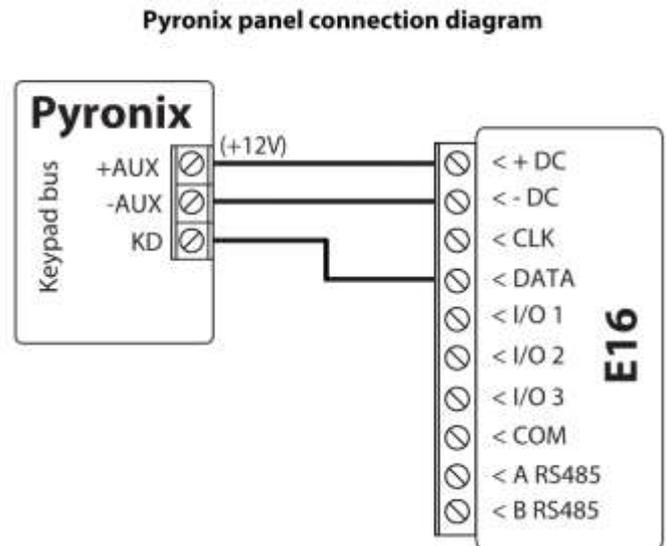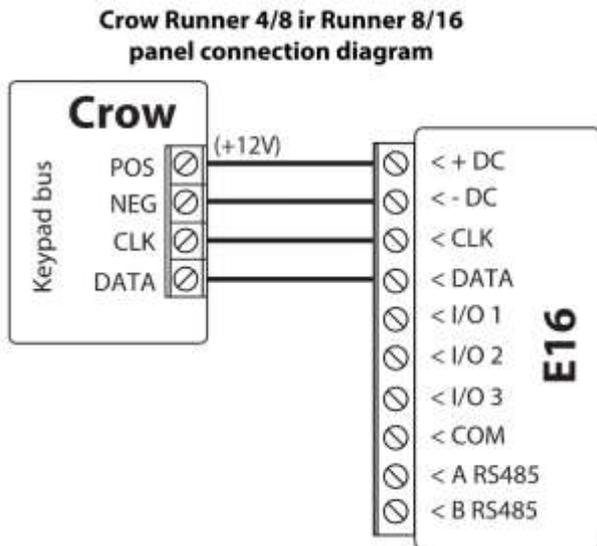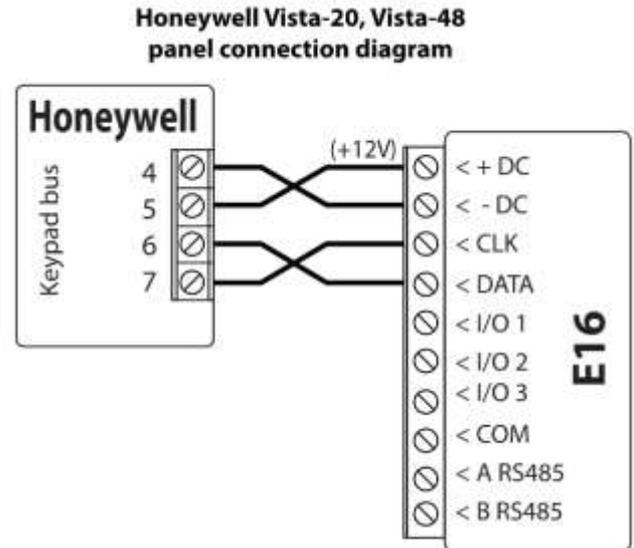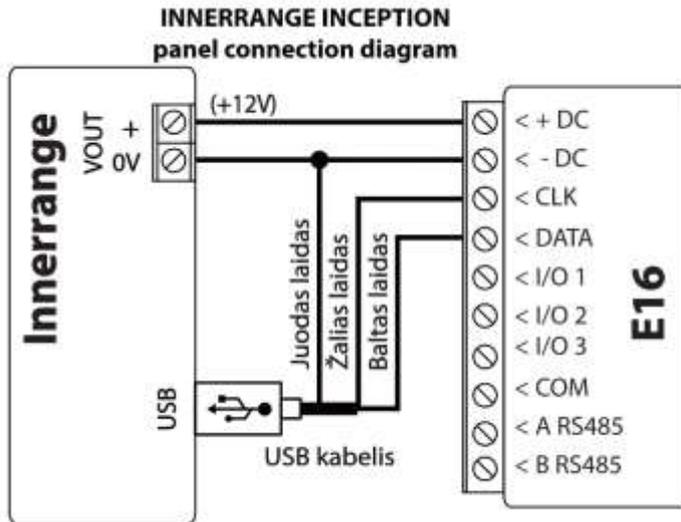

### 3.2 Schematic for connecting to panel keyswitch zone

Follow this schematic if the control panel will be armed/disarmed with a **E16** PGM output turning on/off the panel’s keyswitch zone.


**Note:** **E16** communicator has 3 universal input / output terminals that can be set to the OUT (PGM) operating mode. The outputs (OUT) can control three areas of the security system. If you want to control the system in this way, in *TrikdisConfig*, in the "System settings" window, uncheck **Remote Arm/Disarm**. The *Protegeus* apps must be configured with the settings described in chapter 5.2 “Additional settings to arm/disarm the system using the control panel’s keyswitch zone”.

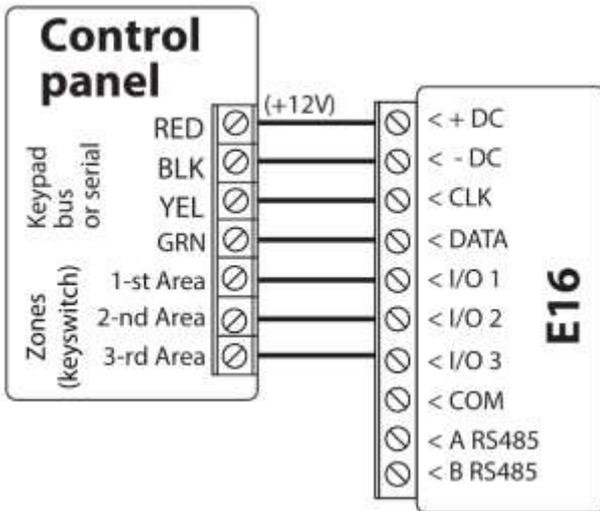

### 3.3 Schematics for input connection


The communicator has 3 universal input / output terminals that can be set to input IN mode. NC, NO, NO / EOL, NC / EOL, NO / DEOL, NC / DEOL circuits can be connected to the input terminal. Default input setting – NO. The input type can be changed in the *TrikdیسConfig* window **IN/OUT -> Type**.

Connect the input according to the selected input type (NO, NC, NC/EOL, NO/EOL, NO/DEOL, NC/DEOL), as shown in the schemes below:

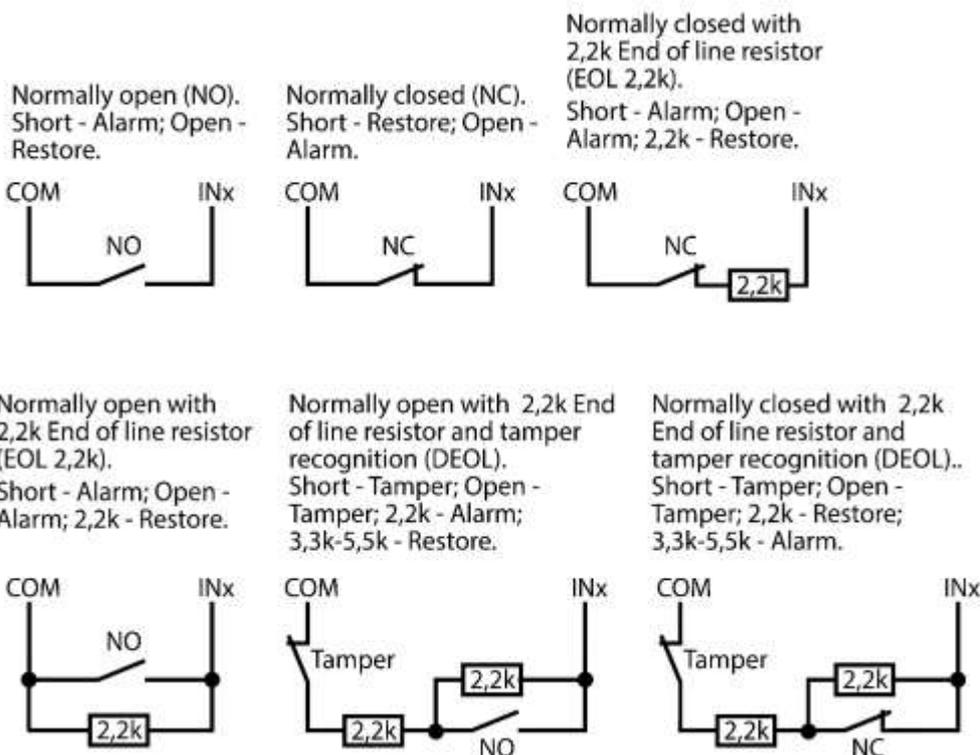


**Note:** If more inputs or outputs need to be connected to the communicator, connect the *TRIKDIS iO* series wired or wireless output expander. Connection method is described in the *iO* manual and chapter 3.6 “Schematics for connecting iO series expansion modules”.

### 3.4 Connect LAN cable

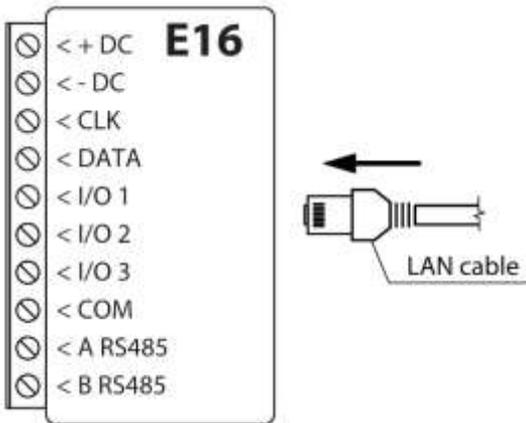


### 3.5 Schematics for wiring a relay

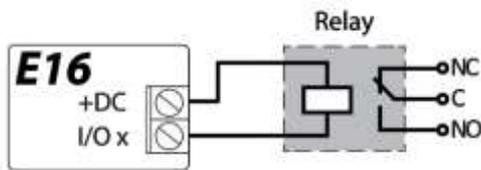

With relay contacts you can control (turn on/off) various electronic appliances. The I/O terminal of the communicator must be set to an output (OUT) mode.

### 3.6 Schematics for connecting iO series expansion modules

If more inputs or outputs need to be connected to the communicator, or if you want to connect a temperature sensor, connect the TRIKDIS *iO* series wired or wireless output expander. Configuration of expander modules connected to the *E16* is described in chapter 6.6 ““RS485 modules” window”.

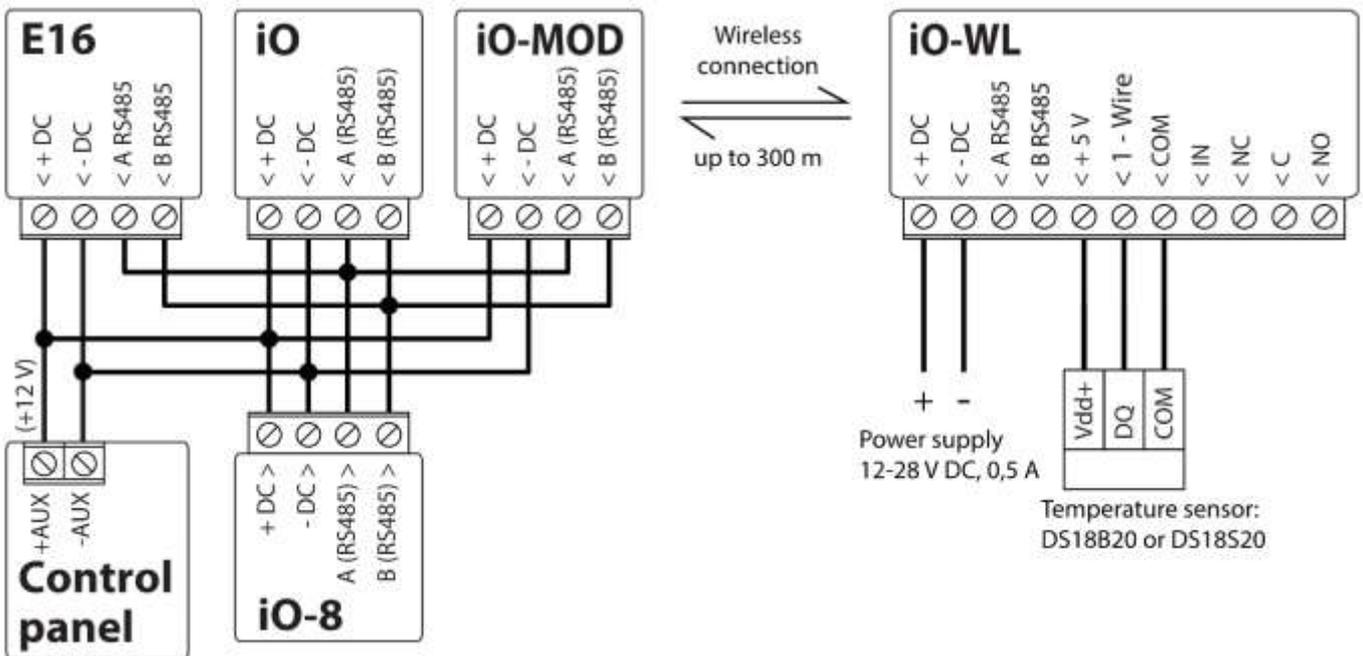

### 3.7 Turn on the communicator

To start the communicator, turn on the security control panel’s power supply. This LED indication on the *E16* communicator must show:

- “POWER” LED illuminates green when the power is on;
- “NETWORK” LED illuminates green, when the communicator is connected to the network.

**Note:** If you see a different LED indication, it indicates a certain malfunction. Diagnose it by following the LED indication table in chapter 1.5 “LED indication of operation”.  
If the **E16** indication does not illuminate at all, check the power supply and connections.

## 4 Programming the control panel

Below it is described how to program the security control panel so that the **E16** communicator could read events from the panel and control it remotely.

To enable remote control of the security panel, make sure that the checkbox **Remote Arm/Disarm** is selected in the *TrikdisConfig* window “**System settings**”.

### DSC

DSC panels do not need to be programmed.

### PARADOX

Paradox control panels need to be programmed only for direct control with *Protegeus*. You do not need to program Paradox panels for reading events.

For remote control of Paradox panels, you need to set up a PC download password. This password must match the password which was set in the *TrikdisConfig* window “**System settings**”, when the checkbox next to **Remote Arm/Disarm** was selected.

To set this password, with the keyboard connected to the security control panel:

- For MAGELLAN, SPECTRA series: go to cell 911 and enter 4-digit PC download password.
- For DIGIPLEX EVO series: go to cell 3012 and enter 4-digit PC download password.

### TEXECOM

Texecom control panels need to be programmed for both reading events and remote control.

You need to set the Texecom panel’s **UDL passcode**. This password must match the password which was set in the *TrikdisConfig* window “**System settings**”, when the box next to **Remote Arm/Disarm** was selected.

The security control panel can be programmed with Texecom software - Wintex. Enter **UDL passcode** (4-digit code) in the **Communication Options** window, **Options** tab.

Also, you can program with a keypad connected to the security control panel:

1. Enter the 4-digit installer’s code and press the [Menu] button to enter the programming menu.
2. Press the [9] key immediately afterwards.
3. Press [7][6], and then [2]. Enter the 4-digit **UDL passcode** (**UDL passcode** must match the **E16** communicator’s **PC login password**).
4. Press [Yes] and leave the programming mode by pressing [Menu].

### UTC INTERLOGIX (CADDX)

Security control panel version must be **V2** or higher With the keyboard connected to the security control panel:

1. Press [\*][8] and enter the installer’s code (default - 9713).
2. Enter the device number assigned to the connected communicator (default - 0).
3. Set the settings below for each row. In sequence, enter the position, segment number and the required setting. Clicking [\*] (asterisk) will return you to the local input field.

Position	Segment	Setting
23	3	12345678
37 (not necessary)	3	12345678
	4	1234567*
90	3	12345678
93	3	12345678

Position	Segment	Setting
96	3	12345678
99	3	12345678
102	3	12345678
105	3	12345678
108	3	12345678


After having programmed all the fields listed, press [Exit] twice to exit the programming mode.

**INNERRANGE**

Innerrange Inception security control panel version must be **2.3.0.3507-r0** or higher.

The control panel must be connected to the internet. Connect to **Innerrange Inception** by entering: <https://skytunnel.com.au/inception/SERIALNUMBER>, where SERIALNUMBER is the number of the controller that you can find on the panel’s enclosure.

Open **Configuration > General > Alarm Reporting**. In the **3rd Party Device Configuration** settings group you need to enter:

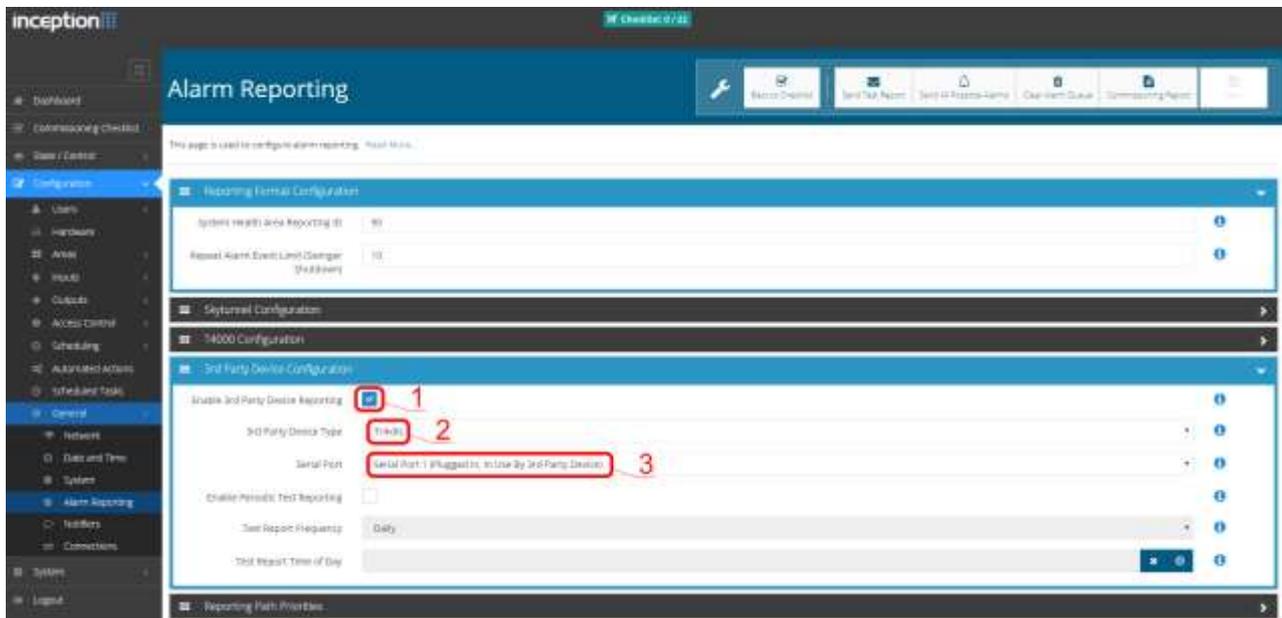

1. **Enable 3rd Party Device Reporting** - select this checkbox.
2. **3rd Party Device Type** - set “Trikdis”.
3. **Serial port** - set “Serial Port 1 (Plugged In, In Use By 3rd Party Device)”.
4. Save settings and exit the application.

**Honeywell Ademco Vista**

Follow these steps for **Honeywell Ademco Vista-20** and **Honeywell Ademco Vista-48** panels. **The panel’s firmware version must be V5.3 or higher.** With a keypad that is connected to the panel:

1. Enter the programming mode. Enter the installer code 4][1][1][2] and after that [8][0][0] . Alternatively, turn on the panel’s power supply. In 50 seconds after the power supply is turned on, press the buttons [\*] and [#] at the same time (this method can be used when programming mode was exited by pressing in keypad [\*][9][8] ).
2. Turn on the sending of Contact ID events via LRR. Press [\*][2][9][1][#] in keypad.
3. When using the „Remote Arm/Disarm“ function, allow to use the 2nd AUI address. In keypad press [\*][1][8][9][1][1][#] .

Exit the programming mode. In keypad press [\*][9][9]

**Crow**

There is no need to program Crow Runner 4/8 and Runner 8/16 panels.

## 5 Remote control

### 5.1 Adding the security system to Protegus app

With **Protegus** users will be able to control their alarm system remotely. They will see the status of the system and receive notifications about system events.

- 1) Download and launch the **Protegus** application or use the browser version: [www.protegus.eu/login](http://www.protegus.eu/login).



- 2) Log in with your user name and password or register and create new account.

**Important:** When adding the **E16** to **Protegus** check if:

1. **Protegus cloud** is enabled. See chapter 6.4 ““User reporting” windows”;
2. Power supply is connected (“POWER” LED illuminates green);
3. Registered to the network (“NETWORK” LED illuminates green).

- 3) Click **Add new system** and enter the **E16**’s “MAC” number. This number can be found on the device and the packaging sticker. After entering click **Next**.




### 5.2 Additional settings to arm/disarm the system using the control panel’s keyswitch zone


**Important:** The control panel zone to which the **E16** output OUT is connected to has to be set to keyswitch mode.

Follow the instructions below if the security control panel will be controlled with a **E16** PGM output, turning on/off the control panel keyswitch zone.


- 1) In the new window, click **Areas** in the side menu. In the next window, specify how many alarm system areas (1, 2, 3) are in the system and press **Next**.

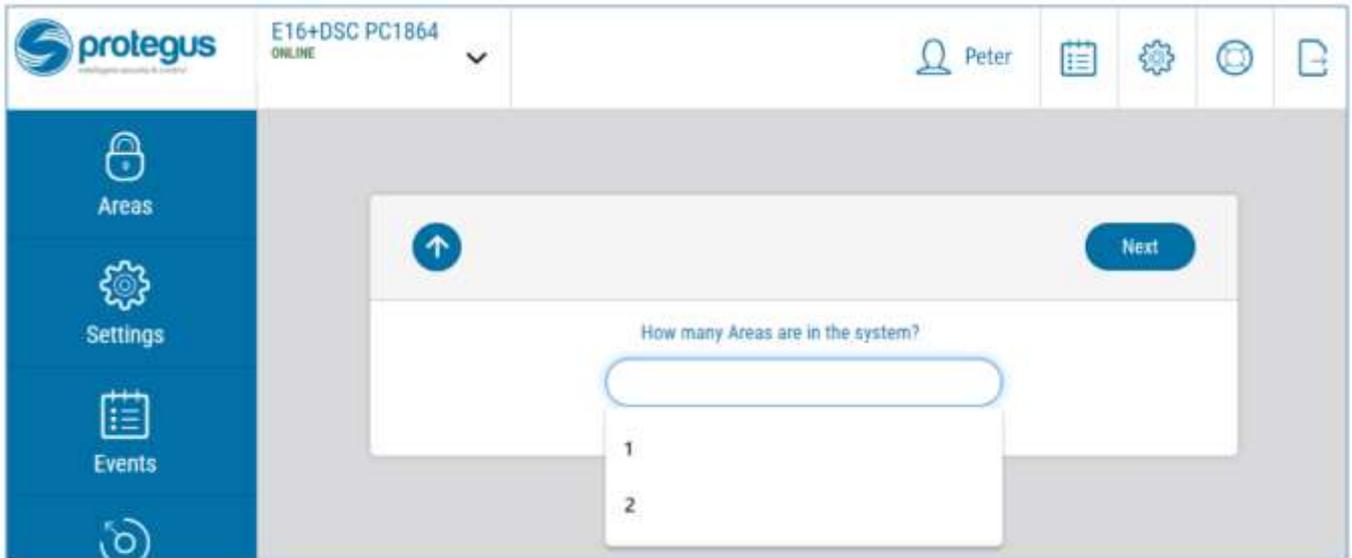

2) In the new window, identify what is the number for each of the specified areas in the security system and press **Save**.

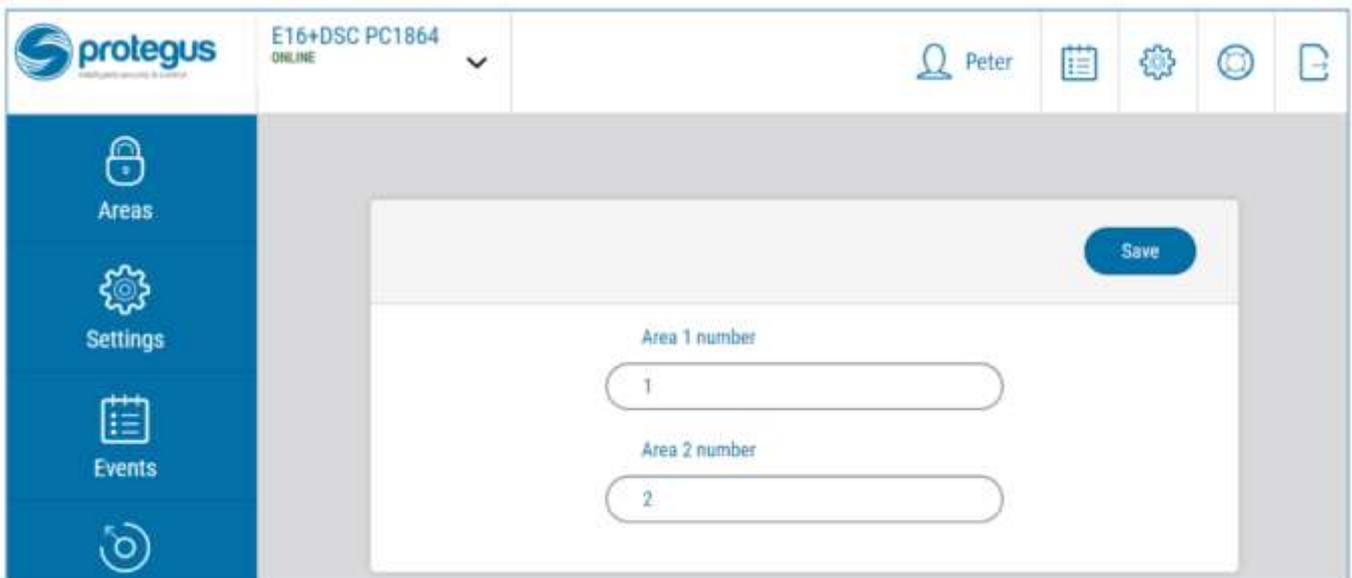


3) In the side menu press **Settings** and in the newly opened window press **Settings**. Select the box **Arm/Disarm with PGM** and specify which area the output will control. One PGM output can control only one area.

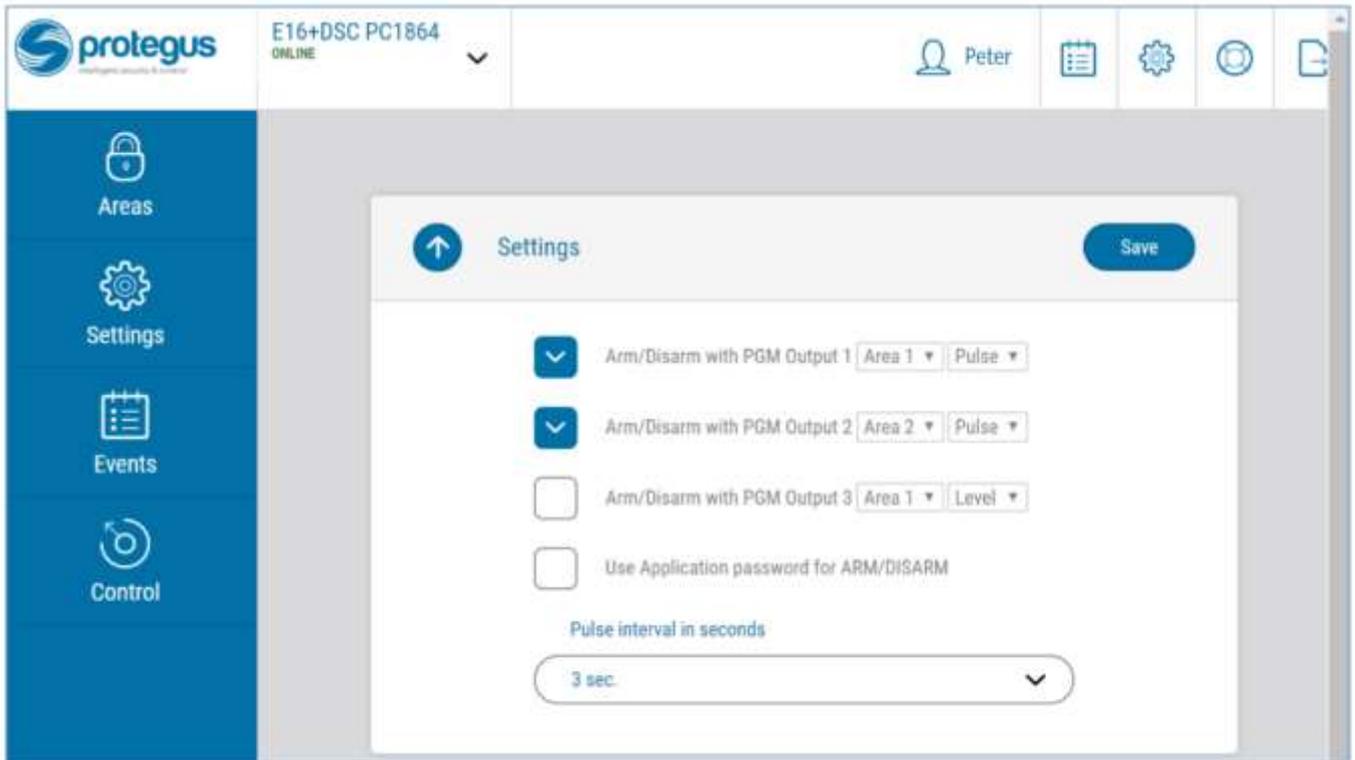

- 4) Select **Level** or **Pulse**, depending on the type of control panel keyswitch zone. You can also change the duration of the pulse interval if it is required for the connected control panel.
- 5) For additional security, you can select **Use Application password for ARM/DISARM**. Then after pressing the button to arm/disarm the alarm system, a window for entering the app password will open.

### 5.3 Arming/disarming the alarm system with Protegus

- 1) To control the system, open the **Areas** window.
- 2) In the **Areas** window click the Area button. In the pop-up window select the action (arm or disarm the security system area).
- 3) If requested, enter the user code or **Protegus** password.

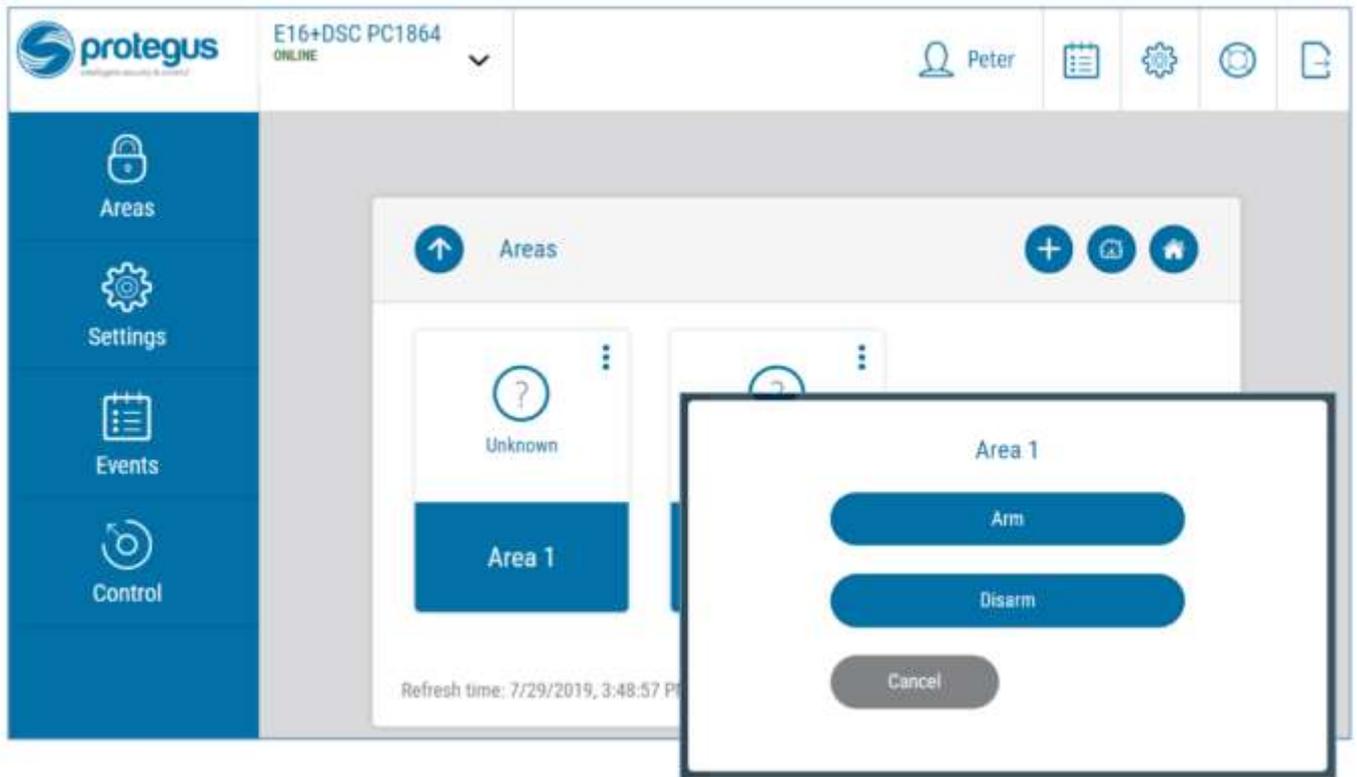

## 6 TrikdisConfig window description

### 6.1 *TrikdisConfig* status bar description


After connecting the *E16* and clicking **Read [F4]**, *TrikdisConfig* will provide information about the connected device in the status bar:



Object	Description
Unique ID	Device IMEI number
Status	Operating condition
Device	Device type ( <b>E16</b> should be shown)
SN	Device serial number
BL	Browser version
FW	Device firmware version
HW	Device hardware version
Status	Connection to program type (via USB or remote)
Administrator	Access level (shown after access code is approved)

After pressing **Read [F4]**, the program will read and show the settings which are set in the *E16*. Set the necessary settings according to the *TrikdisConfig* window descriptions given below.

## 6.2 "System settings" window

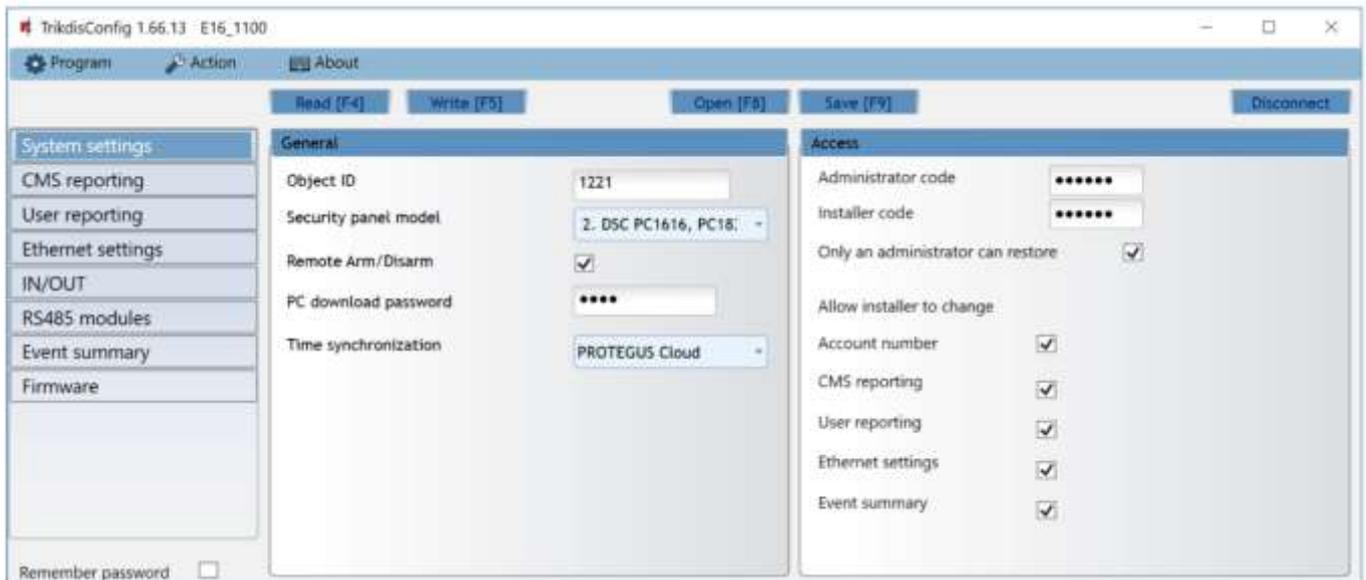

### "General" settings group

- **Object ID** – if the events will be sent to the CMS (Central Monitoring Station), enter the account number provided by the CMS (4 characters hexadecimal number, 0-9, A-F).
- Select the **Security Panel model** that will be connected to the communicator.
- **Remote Arm/Disarm** - when the checkbox is selected, the **E16** will directly control the control panel remotely. This setting will be visible only for directly controlled panels. For direct control of the control panels you need to change the panel settings, as described in section 4 "Programming the control panel".
- **PC download password** - for the direct control of Paradox and Texecom control panels you need to enter the PC/UDL password. It must match the password that was entered in the control panel. How to change this password is described in section 4 "Programming the control panel".
- **Time synchronization** - select which server to use for time synchronization.


### "Access" settings group

When setting up the communicator **E16** there are two levels of access for, the administrator and the installer:

- **Administrator code** - allows you to access all configuration fields (default code - 123456).
- **Installer code** - limited access for configuring the communicator (default code - 654321).
- **Only an administrator can restore** - if the box is checked, factory settings can be restored only by entering the administrator code.
- **Allow installer to change** – the administrator can specify which settings can be changed by the installer.

### 6.3 “CMS reporting” window

#### “CMS settings” tab

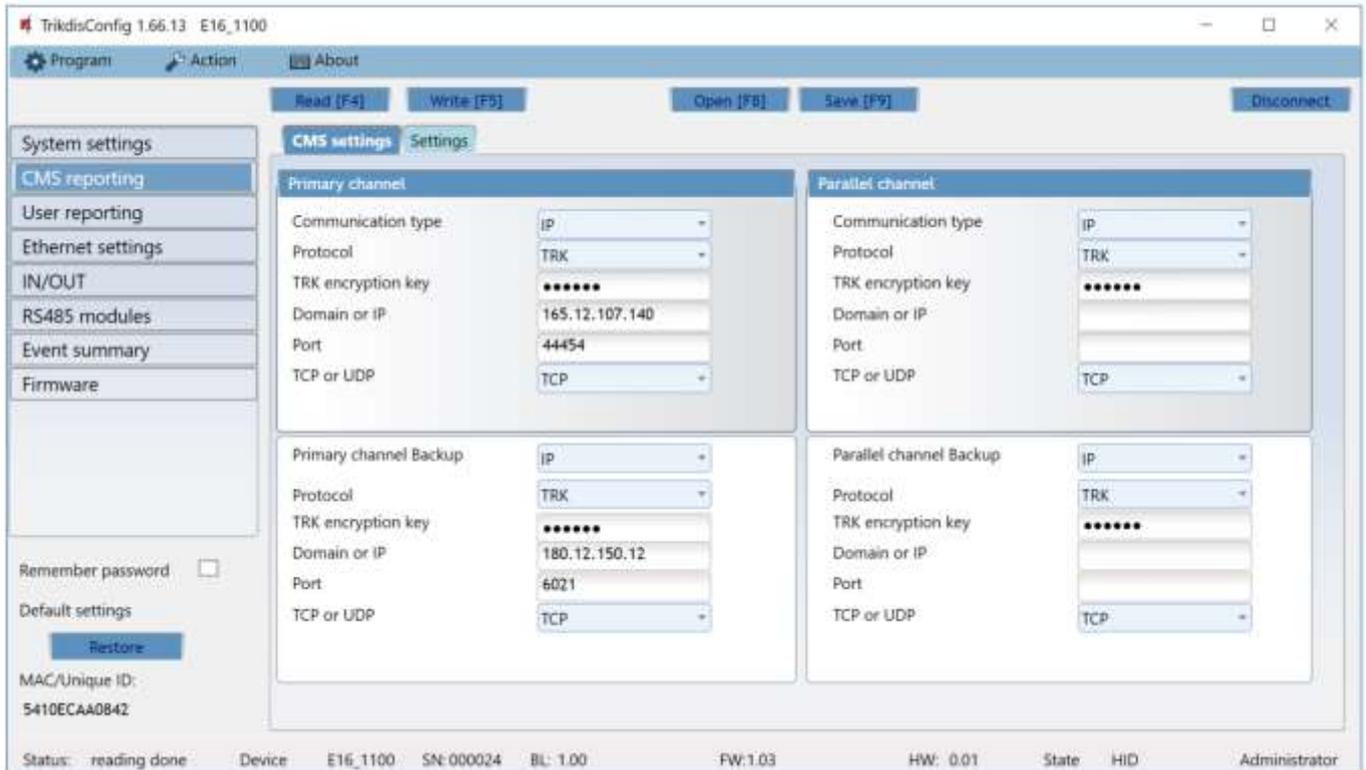

The communicator sends events to the monitoring station via a wired internet (IP) connection.

Events can be sent over several channels of communication. The primary and parallel communication channels can operate simultaneously, this way the communicator can send events to two receivers at the same time. Backup channels can be assigned for both primary and parallel channels, which will be used when the connection via the primary or parallel channel is interrupted. Communication is encoded and password protected. A TRIKDIS receiver is required for receiving and sending event information to the monitoring programs:

- For connection over IP - software receiver IPcom Windows/Linux, hardware IP/SMS receiver RL14 or multichannel receiver RM14.

#### “Primary channel” settings group

- **Communication type** - select which method for connecting to the monitoring station receiver will be used (IP).
- **Protocol** - select in which coding the events should be sent: **TRK** (to TRIKDIS receivers), **DC-09\_2007** or **DC-09\_2012** (to universal receivers).
- **TRK encryption key** - 6-digit message encryption key. The key written to the communicator must match the receiver’s key.
- **Domain or IP** - enter the domain or IP address of the receiver.
- **Port** - enter the network port number of the receiver.
- **TCP or UDP** - select in which protocol (TCP or UDP) the events should be sent.

#### “Primary channel Backup” settings group

Enable the backup channel mode to send events via backup channel if connection via primary channel is lost. Backup channel settings are same as described above.

#### “Parallel channel” settings group

Events are transmitted in parallel with the first channel through this channel. When the second channel is enabled, events can be sent simultaneously to two receivers (e.g., local and centralized monitoring stations). Parallel channel settings are the same as described above.

“Settings” tab



“Settings” settings group

- **Test period** - TEST event period for testing the connection. Test events are sent as Contact ID messages and forwarded to the monitoring software.
- **IP ping period** – period for sending internal PING heartbeats. These messages are only sent via IP channel. The receiver will not forward PING messages to the monitoring software to avoid overloading it. Notifications will only be sent to the monitoring software if the receiver fails to receive PING messages from the device within the set time.  
By default, the “Connection lost” notification will be transmitted to the monitoring software if the PING message is not received by the receiver over a time period three times longer than set in the device. E.g. if the PING period is set for 3 minutes, the receiver will transfer the “Connection lost” notification if a PING message is not received within 9 minutes. PING heartbeats keep the active communication session between the device and the receiver. An active session is required for remote connection, control and configuration of the device. We recommend setting the PING period for no more than 5 minutes.
- **Backup reporting after** - indicates the number of unsuccessful attempts to send the message via Primary channel. If device fails to transmit specified number of times, the device will connect to transmit the messages via Backup channel.
- **Return from backup after** - time after which the E16 will attempt to reconnect and transmit messages via the Primary channel.

“DC-09 settings” settings group

The settings are displayed when the DC-09\_2007 or DC-09\_2012 protocol is set in the communication channel Protocol field for sending events to universal receivers.

- **Object ID in DC-09** - enter the object number. The object number entered in this field will be used if DC-09 encoding is selected. A hexadecimal number from 3 to 16 characters can be entered. This Number is provided by the CMS (central monitoring station).
- **DC-09-line No.** - enter line number of the receiver.
- **DC-09 receiver No.** - enter the receiver number.

## 6.4 “User reporting” window

### “PROTEGUS Cloud” tab



**Protegas** service allows users to remotely monitor and control the communicator. For more information about **Protegas** service, visit [www.protegas.eu](http://www.protegas.eu).

#### “Protegas Cloud” settings group

- **Enable connection** – enable the **Protegas** service, the **E16** will be able to exchange data with **Protegas** app and to be remotely configured via **TrikdisConfig**.
- **Protegas Cloud access Code** - 6-digit code for connecting to the **Protegas** app (default - 123456).


## 6.5 “Ethernet settings” window



#### “Ethernet settings” settings group

- **Use DHCP** - check the box to have the communicator automatically register to the network. If the auto-register fails, you will need to enter it manually:
  - **Static IP** – static IP address for when manual registering mode is set.
  - **Subnet mask** – subnet mask for when manual registering mode is set.
  - **Default gateway** – gateway address for when manual registering mode is set.
- **DNS1, DNS2** - (Domain Name System) identifies the server that specifies the IP address of the domain. Used when domain is set in the communication channel **Domain or IP** field (not IP address). Google DNS server is set by default.

## 6.6 “IN/OUT” windows

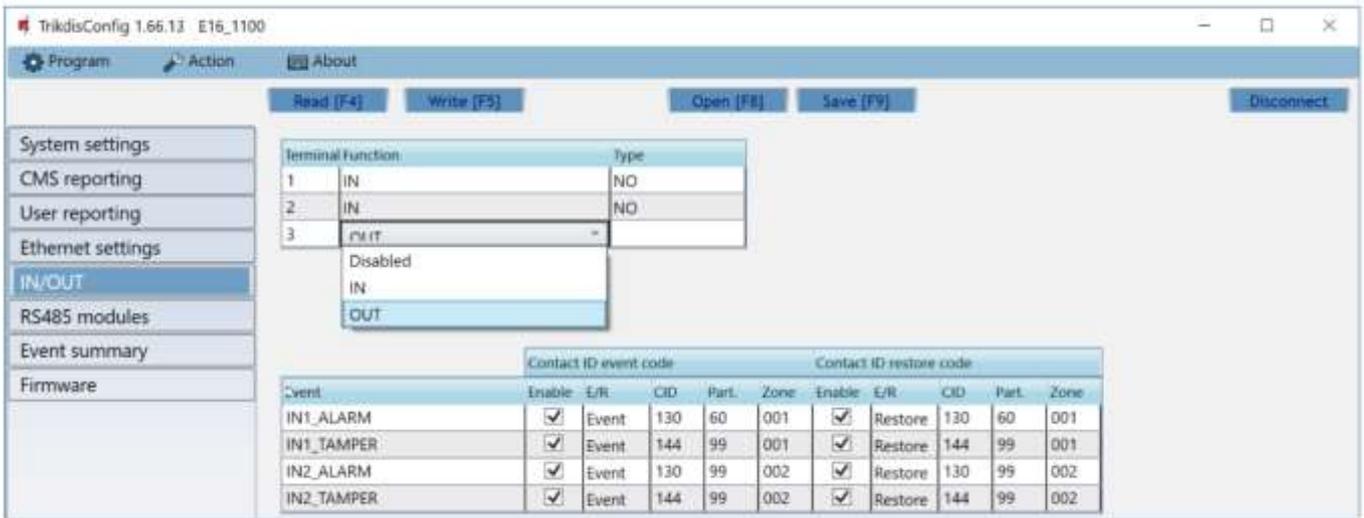

The communicator has 3 universal (input / output) terminals. The table can set the terminal operating mode (Off, IN, OUT). The input must specify the type of circuit to be connected NC, NO, NO / EOL, NC / EOL, NO / DEOL, NC / DEOL.


Additional sensors can be connected to the communicator inputs. When the sensor is triggered, the communicator will send an event message. The input is assigned a Contact ID code, which will be sent to CSP and Protegus.

- **Enable** – checked event fields where messages will be sent to CMS and **Protegus**.
- **E/R** – choose what type of event will be sent when input is triggered – **Event** or **Restore**.
- **CID** – enter the event code or leave the default value. Upon entering the event, the event code will be sent to **Protegus** and CMS.
- **Part** – enter the partition (area) number that will be sent when an internal event occurs and the system is restored.
- **Zone** - enter the zone number that will be sent when an internal event occurs and the system is restored.

## 6.7 “RS485 modules” window

### “Modules list” tab

**IO** series expanders can be connected to the communicator to add additional inputs, outputs and serial buses for temperature sensors. Connected expanders must be added to the **Modules list** table.

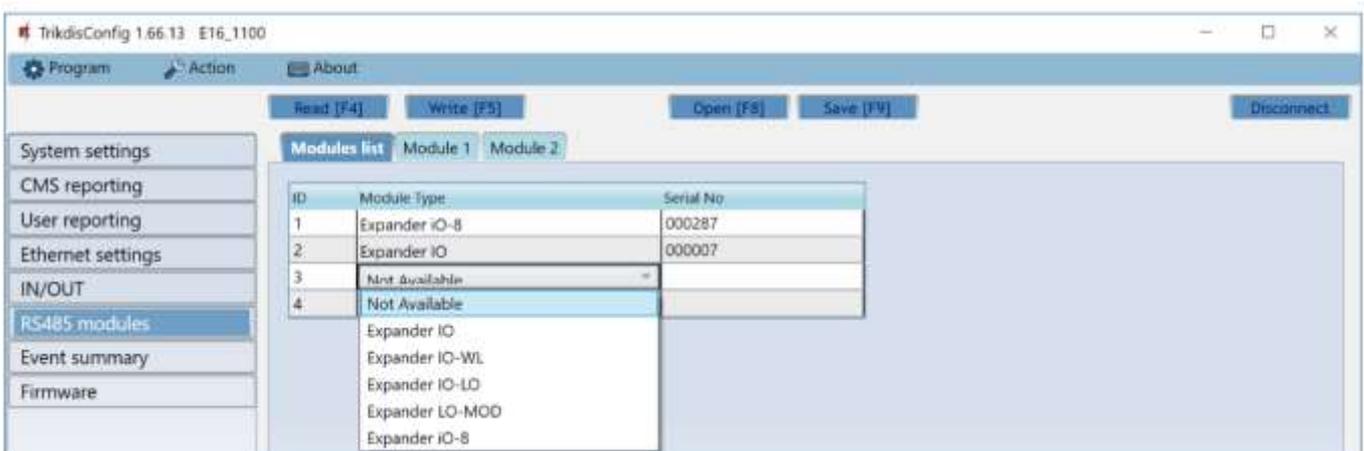


- **Module type** – select the module that is connected to the communicator via RS485 from the list.
- **Serial No** – enter the module serial number (6 digits), which is indicated on stickers on the module’s case and packaging.

Go to **RS485 modules** → **Module**.

“Module” tabs

After adding the expander to the communicator as described above, in the **RS485 modules** window a new tab will appear with this module’s settings. The tab will be given a number. Bellow we describe the settings for **iO-8** and **iO** series expanders.

**iO-8 expander settings window**

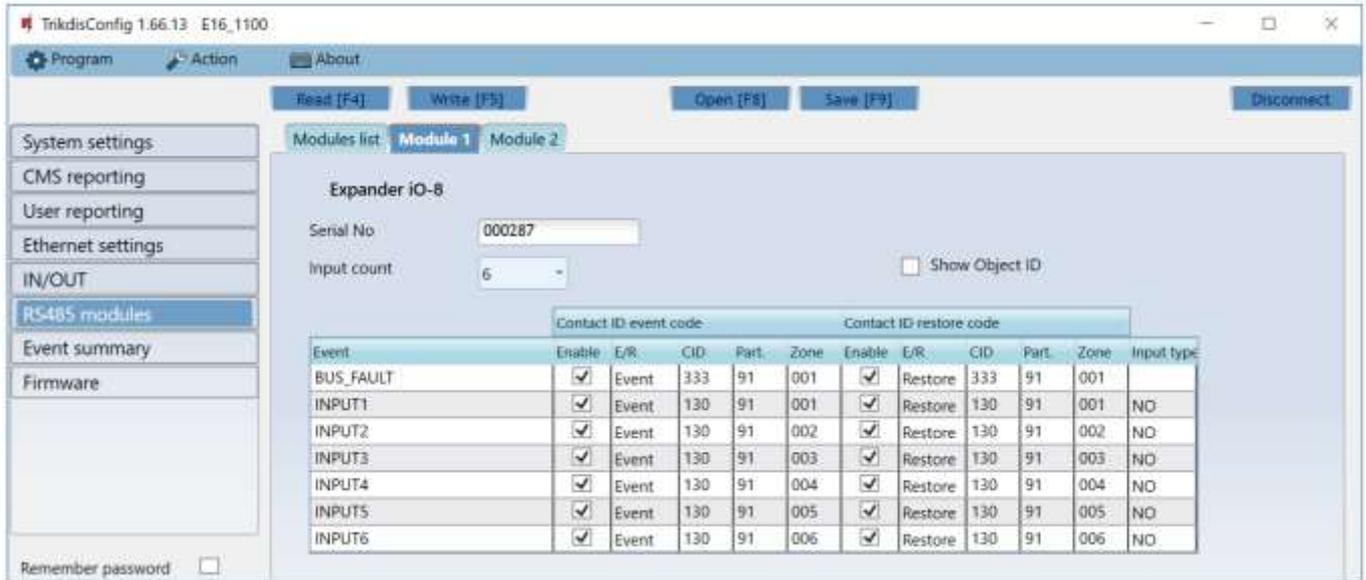

Expander **iO-8** has 8 universal (input/output) terminal contacts. Up to four **iO-8** expanders can be connected.

- **Input Count** – select what number of terminal contacts should be set to input (IN) mode. The rest of the terminal contacts will become outputs (OUT).

Settings for controllable outputs are set directly in Protegus app. There you can assign an output for arming/disarming the alarm system or for remote control of devices.

In the table inputs can be assigned Contact ID event and restore codes. After input is triggered, the communicator will send an event with set event code to monitoring station receiver, Protegus app.


**Contact ID event code:**

- **Enable** – allow message transmission, when the input is triggered.
- **E/R** – choose what type of event will be sent when input is triggered – **Event** or **Restore**.
- **CID** – assign a Contact ID event code to the input.
- **Part.** – assign the partition (area) to the input. It is set automatically: if the module no. is 1, then the area is 91; if the module no. is 4, then the area is 94.
- **Zone** – set the zone number for the input.

**Contact ID restore code:**

- **Enable** – allow message transmission when the input is restored.
- **E/R** – choose what type of event will be sent when input is restored – **Restore** or **Event**.
- **CID** – assign the Contact ID restore code to the input.
- **Part.** – assign the partition (area) to the input. It is set automatically: if the module no. is 1, then the area is 91; if the module no. is 4, then the area is 94.
- **Zone** – set the zone number for the input.
- **Input type** – select the type of the input (NO or NC).

iO expander settings window

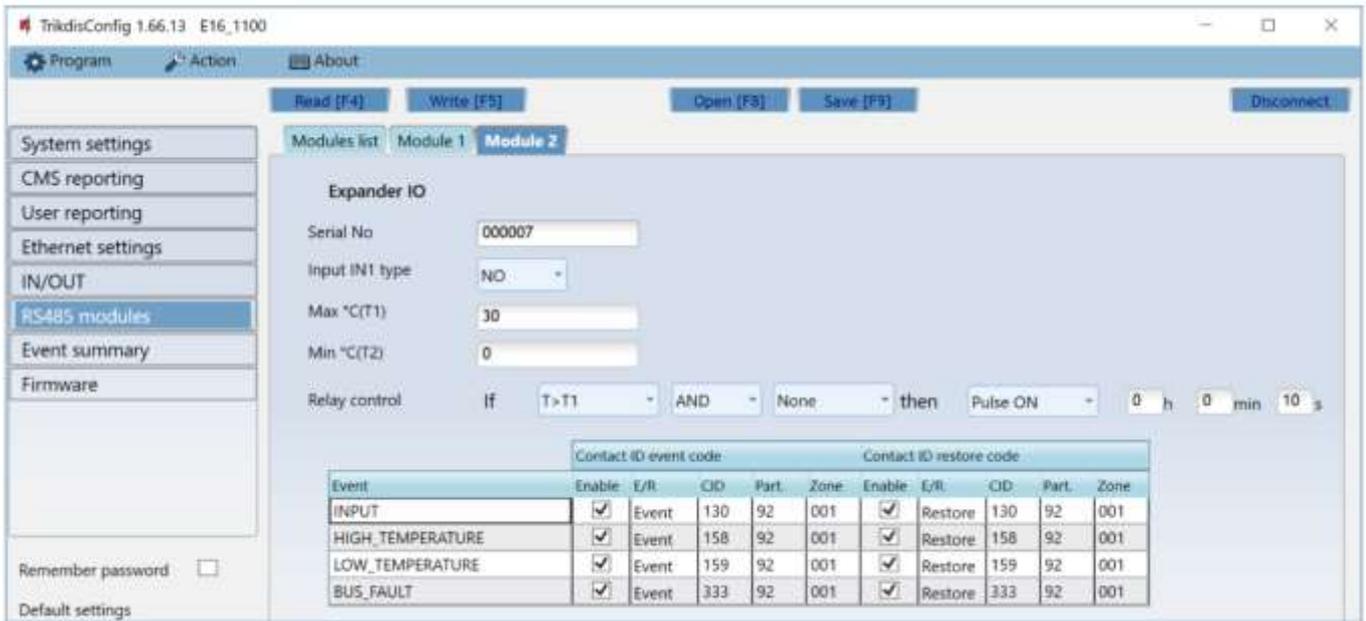

Expander **iO** has: terminals for 1 input, 1 output (relay contacts) and 1-Wire serial bus for connecting temperature sensors. Relay output can be controlled according to logical (AND, OR, XOR) conditions.

- **Input IN1 type** – set the input type (NO or NC).
- **Max °C(T1)** – when the temperature is higher than this setting, an event message will be generated. For an event message to be generated, it must be enabled in the table.
- **Min °C(T2)** – when the temperature is lower than this setting, an event message will be generated. For an event message to be generated, it must be enabled in the table.
- **Relay control** – set logical (AND, OR, XOR) conditions, upon which the relay output will be controlled.

In the table inputs can be assigned Contact ID event and restore codes. After an input is triggered, the communicator will send an event with the set event code to the monitoring station receiver and to **Protegeus** app. Set as described in the previous page about **iO-8 expander settings window**.

### 6.8 “Event summary” window

This window allows you to turn on, off, and modify internal messages sent by your device. Disabling an internal message in this window will prevent it from being sent regardless of other settings.



- **COMMUNICATION** – message about connection error between the control panel and **E16**.
- **POWER** – message about low power supply voltage.
- **REMOTE\_STARTED** – message about remote connection to configure **E16** with **TrikdisConfig**.
- **REMOTE\_FINISHED** – message about disconnection from remote configuration with **TrikdisConfig**.

- **START** – message about *E16* connecting to the network.
- **TEST** – periodic test message.

**Note:** To enable periodic TEST messages and set their period, go to **CMS reporting -> Settings -> Test period**.

- **Enable** – when selected, the sending of messages is enabled.

You can change the Contact ID code for each event, and also the zone and partition number.

### 6.9 Restoring factory settings

To restore the communicator's factory settings, you need to click the **Restore** button in the *TrikdisConfig* window.




## 7 Remote configuration

**Important:** Remote configuration will work only if:

1. **Protegas cloud** is enabled. How to enable cloud is described in section 6.4 ““User reporting” window”;
2. Power supply is connected (“POWER” LED illuminates green);
3. Registered to the network (“NETWORK” LED illuminates green).

1. Start the configuration program *TrikdisConfig*.
2. In the **Remote access** section enter the communicator’s **MAC** number. This number can be found on the device and the packaging sticker.

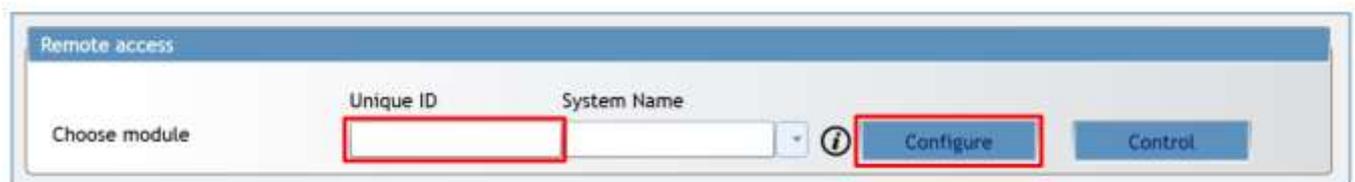

3. (Optional) in the **System name** field, enter the desired name for the *E16* with this Unique ID.
4. Press **Configure**.
5. In the newly opened window click **Read [F4]**. If required, enter the administrator or installer code. To save the password, select “**Remember password**”.
6. Set the necessary settings and when finished, click **Write [F5]**.

## 8 Test communicator performance

When the configuration and installation is complete, perform a system check:

1. Generate an event:
  - by arming/disarming the system with the control panel’s keypad;
  - by triggering a zone alarm when the security system is armed.
2. Make sure that the event arrives to the CMS (central monitoring station) and/or is received in the *Protegas* application.
3. To test communicator input, trigger it and make sure to receive the correct event.
4. To test the communicator outputs, activate them remotely and check their operation.
5. If the security control panel will be controlled remotely, arm/disarm the security system remotely by using the *Protegas* app.

## 9 Firmware update

**Note:** When the communicator is connected to *TrikdisConfig*, the program will automatically offer to update the device's firmware if updates are present. Updates require an internet connection. Antivirus software, firewall or strict access to internet settings can block the automatic firmware updates. In this case, you will need to reconfigure your antivirus program.

The communicator's firmware can also be updated or changed manually. After an update, all previously set settings will remain unchanged. When writing firmware manually, it can be changed to a newer or older version. To update:

1. Run *TrikdisConfig*.
2. Connect the communicator via USB cable to the computer or connect to the communicator remotely.
  - If a newer firmware version exists, the software will offer to download the newer firmware version file.
3. Select the menu branch **Firmware**.



4. Press **Open firmware** and select the required firmware file. If you do not have the file, the newest firmware file can be downloaded by registered users from [www.trikdis.com](http://www.trikdis.com), under the download section of the **E16** communicator.
5. Press **Update [F12]**.
6. Wait for the update to complete.