

Since 1968

COMMAX
SmartHome & Security

User Manual

Door Camera DRC-4FC





www.commax.com

COMMAX Co.,Ltd.




- Thank you for purchasing COMMAX products.
- Please carefully read this User's Guide (in particular, precautions for safety) before using a product and follow instructions to use a product exactly.
- The company is not responsible for any safety accidents caused by abnormal operation of the product.

1. Overview

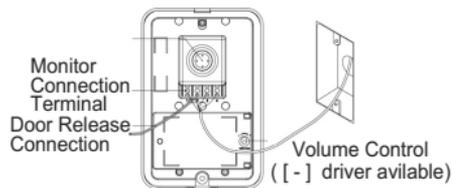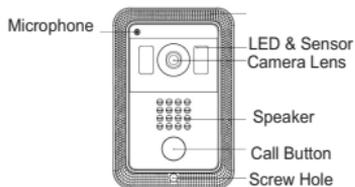


2. Installation & Wiring

[Installation]

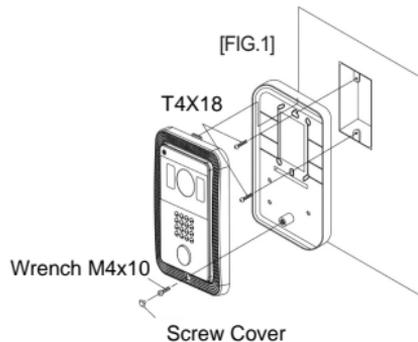


- 1 Secure it to the wall hole and wall mounted hole to install. [FIG-1]
- 2 Wire the household monitor cables with matched polarity as shown below. [FIG-2] (#1:Voice, #2:GND, #3:DC12V, #4:Video)
- 3 In the wall-hanging, check the screen of monitor inserted from the groove and check if the screen is working well as you want.
- 4 Wire the switch cables as shown below. [FIG-2]
- 5 Fix it at the bottom of the product with screw.[FIG-1]

[Wiring]

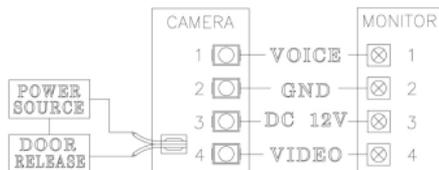


[FIG.2]


► Position of camera

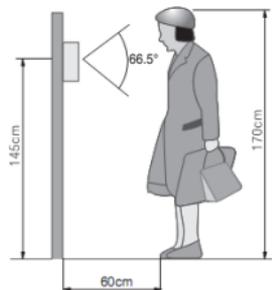

3. PARTS

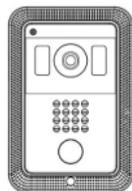

DRC-4FC

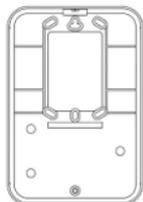

WALL BRACKET



MOUNTING
SCREW
T4X18



WLENCH
SCREW
M4x10



SCREW
COVER



WLENCH
HEXAGON



MOUNTING
SCREW
WHM M3x30
(HEXAGON 3x30)



MANUAL

4. Specifications

MODEL NO.	DRC-4FC				
Raged Voltage	12V $\overline{\text{---}}$ (From Monitor)				
Wiring	4 Wire In Polarity				
(House/Door Release)	2 Wire In Non-polarity				
Pickup Device	1/3" CMOS IMAGE SENSOR (0.41Mega)				
Conversation Method	Synchronous				
TV System	NTSC or PAL				
Min. Illumination	0.1 LUX (300mm From Camera)				
Illumination	White LED(3pie) 2EA				
Image Adjustment	Horizontal 82°, Vertical 66.5°				
ANGLE ADJUSTMENT	Up Down Left Right 12°				
Operating Temperature	-10°C(tested up to -40°C) ~ +50°C				
Dimension (mm)	119.4(W) x 178(H) x 20.1(D)				
Distance(TIV Cable)	Diameter (pie)	0.5	0.65	0.8	1
Distance(Miter)		28	50	70	115

COMMAX

COMMAX Co.,Ltd.

513-11, Sangdaewon-dong, Jungwon-gu, Seongnam-si, Gyeonggi-do, Korea
Int'l Business Dept. : Tel.; +82-31-7393-540~550 Fax.; +82-31-745-2133
Web site : www.commax.com

Printed In Korea / 2016.04.105